


autarco

Installation manual

GPRS stick for SX, MX, LX, XLX & UX inverters

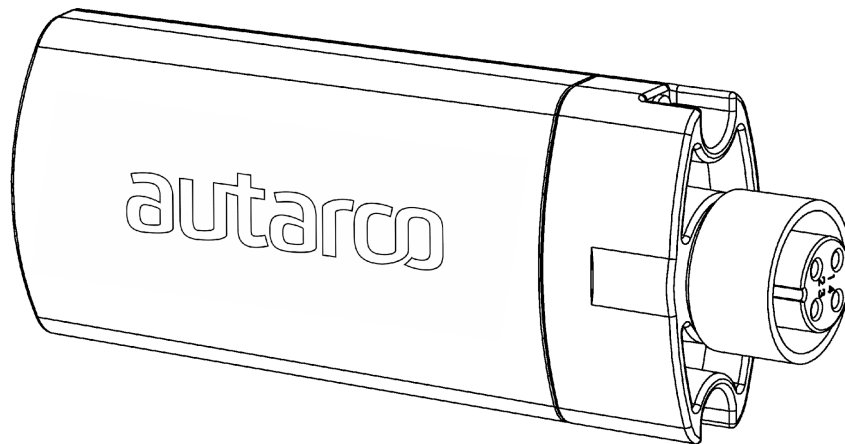



Contact Information

Autarco Group B.V.
Schansoord 60
5469 DT Erp
The Netherlands

www.autarco.com
info@autarco.com

Other Information

This manual is an integral part of the unit. Please read the manual carefully before installation, operation or maintenance. Keep this manual for future reference.

Product information is subject to change without notice. All trademarks are recognized as the property of their respective owners.

© Autarco Group B.V.
All rights reserved.

Table of contents

1. Introduction	4
1.1 Read this first	4
1.2 Monitoring connection topography	4
2. Installing the GPRS stick	5
2.1 Unlock the security code on your SIM card	5
2.2 Install the SIM card	5
2.3 Installing the GPRS stick	6
2.4 Configure the GPRS stick	7
3. Check	8
3.1 Is the GPRS stick connected?	8
3.2 Register in My Autarco	8

1. Introduction

1.1 Read this first

The main purpose of this user manual is to provide instructions and detailed procedures for installing, operating, maintaining, and troubleshooting the Autarco GPRS stick which is used with the Autarco inverter series SX, MX, LX, UX and XLX.


To reduce the risk of electrical shock, and to ensure the safe installation and operation of the GPRS stick, the following safety symbols appear throughout this document to indicate dangerous conditions and important safety instructions:



WARNING! Indicates safety instruction, which if not correctly followed, can result in injury or property damages.

Please keep this user manual available at all times.

1.2 Monitoring connection topography

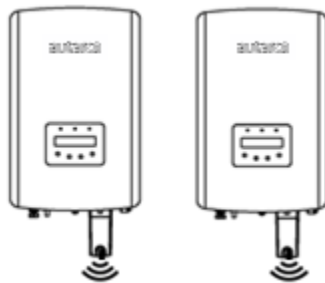

Public mobile network

The advantage of monitoring on the GPRS network is the independence of a local internet network, which makes it possible to monitor performance of PV systems in remote areas or when the local internet network is not accessible.

NOTE: Monitoring by GPRS connection makes use of the public mobile network. In most cases, you will need a data plan that involves certain costs.

2. Installing the GPRS stick

2.1 Unlock the security code on your SIM card

If the SIM card has a PIN code, you must unlock it by using a mobile phone. Insert the SIM card into the phone instead of your regular SIM card.

Android:

- Go to 'Settings'
- 'Security'
- 'Set up SIM card lock'
- Uncheck the box next to 'Lock SIM card'
- Confirm the change by inputting the current PIN code
- <OK>

iPhone:




WARNING! Most iPhones use a SIM card in the so-called nano-size. If you would like to use an iPhone for this procedure, you will have to make sure the SIM card is resized to fit in the iPhone. By doing so, a convertor is necessary to fit the SIM card in the GPRS stick afterwards.

- Go to 'Settings'
- 'Phone'
- 'SIM PIN'
- Uncheck the box next to 'SIM PIN'
- Confirm the change by inputting the current PIN code
- <OK>

2.2 Install the SIM card


The SIM card can now be installed in the GPRS stick. Make sure to close the GPRS sticks housing after installing the SIM card.

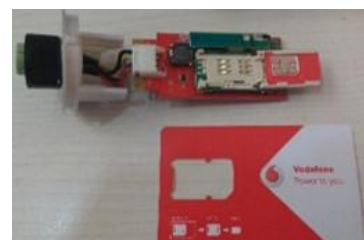

2.3 Installing the GPRS stick

Connect the GPRS stick to the corresponding communication interface on the inverter (make sure the four connector pin numbers correspond) and tighten the GPRS stick, by using the ring on top of the stick.

NOTE: Never turn the housing itself to prevent damage to both the stick and the inverter.

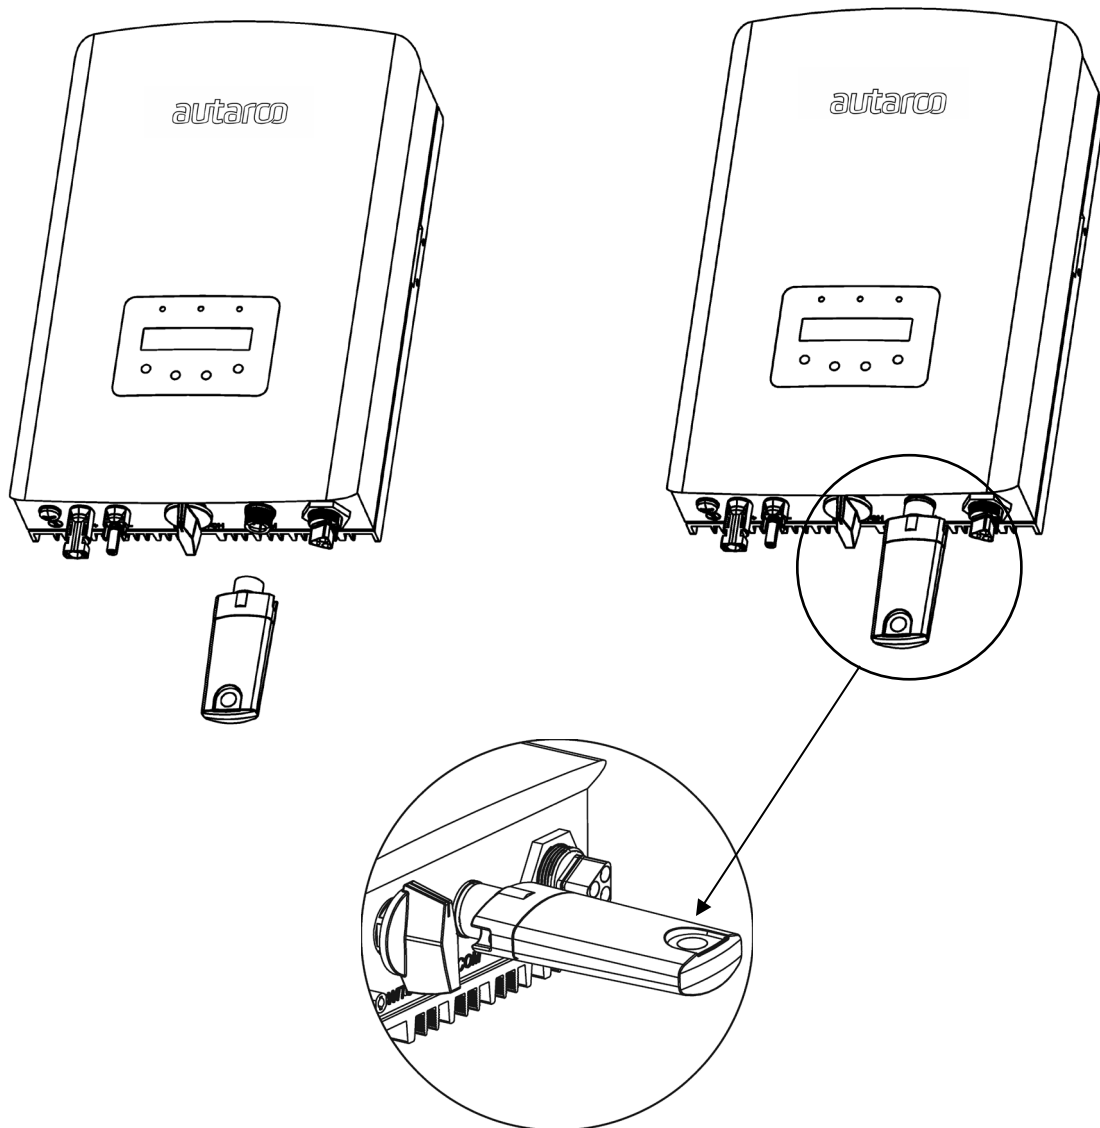

WARNING! The device must be kept away from large metal objects and electrical devices with strong magnetic fields, such as microwave oven, refrigerator, cordless phone, concrete wall, PV panel and metal wall, to ensure the communication quality. Communication quality may be affected in lightning storms.

2.4 Configure the GPRS stick

To activate the data communication, a SMS has to be sent from a mobile phone to the SIM card in the GPRS stick. The exact text of this message depends on the providers conditions.

S2.GPRS-STICK.1 (Grey housing)

With username and password:

```
AT+APN=214028,[APN],[user],[password]
```

Without username and password:

```
AT+APN=214028,[APN]
```

Please note: leave the brackets [] away when entering the command.

S2.GPRS-STICK.2 (Blue housing)

With username and password:

```
AT+YZAPN=[APN],[user],[password]
```

Without username and password:

```
AT+YZAPN=[APN]
```

Please note: leave the brackets [] away when entering the command.

In the following link you will find the exact information on [APN], [username] and [password] for all Dutch providers.

<https://www.gadgetgoeroe.nl/tips/apn-instellingen-van-alle-nederlandse-mobiel-internet-aanbieders/>

This information may have changed. Check on the website of the provider the latest information.

This type of SIM-cards are offered and sold as M2M and IoT. They have a low monthly fee and a low maximum bandwidth. Some providers have a portal to manage multiple cards.


The average usage of a SIM-card is 10 KB per inverter per day.

Please contact your provider for installation outside the Netherlands.

3. Check

3.1 Is the GPRS stick connected?

When the GPRS stick is properly installed, you will see both a green and a red LED light up within the sticks housing. A red LED on the side of the stick is blinking when data is transmitted.

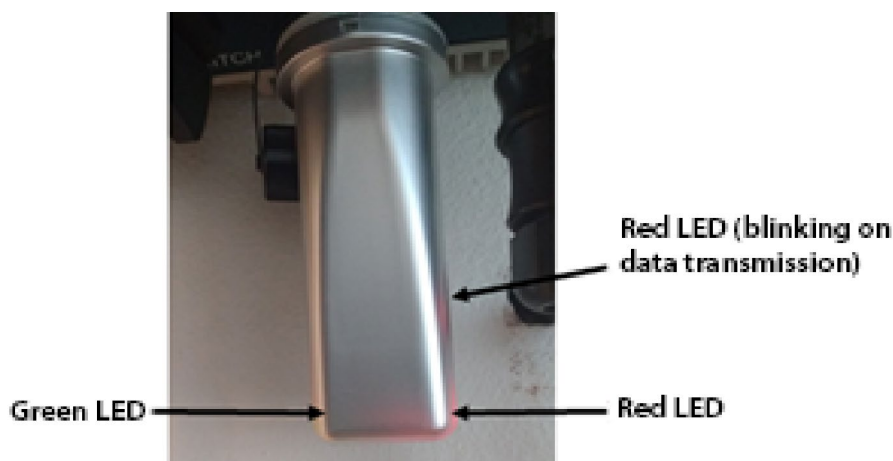

3.2 Register in My Autarco

Check connection

WiFi stick connected to the local router? Remote server is pingable? Check here if MyAutarco is receiving messages from the WiFi stick.

WiFi stick serial number

[Check latest message](#)

In MyAutarco you can check if the GPRS stick is connected and transmitting data. Go to the monitoring setup wizard, enter the serial number and press 'Check latest message'. If the GPRS stick is properly connected, you can continue the monitoring setup to register the stick and connect it to the relevant PV system.